


Ergo Nav Mounting Instructions

Quick, Simple, Easy, Secure and Portable

The **ERGO NAV®** adjustable mouse platform is made of durable, High Impact ABSi Plastic. Velcro Straps are used to mount the **ERGO NAV®** to the arm of a desk chair. The UNIVERSAL MOUNT system will not damage the chair or arm. Since it is a simple matter of putting together or pulling apart 3 Velcro Straps, the **ERGO NAV®** can easily be moved from your desk chair at home to your desk chair at the office.



ERGO NAV® Mounting Instructions

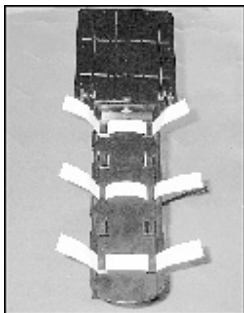


STEP 1

Step 1

Route Velcro straps through the slots as shown in step 1 photo.

See photo of bottom of Ergo Nav (Step 1 photo)

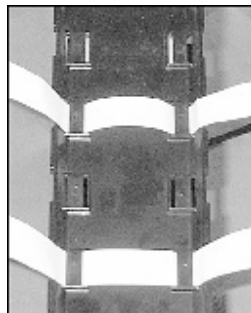

STEP 1a

Step 1a

Route Velcro straps through the slots as shown in photo/step 1a.

Close up photo of Step 1 (step 1a)



STEP 2

Step 2

Position the non-skid strip on the armrest on which you will attach your ERGO NAV. (No Adhesive required.)



STEP 3





Step 3

Place the ERGO NAV on top of the armrest as shown. Pull the straps tight around the armrest securing the Velcro ends together.

See Step 2 photo

See Step 3 photo.

ERGO NAV® Adjustment Instructions

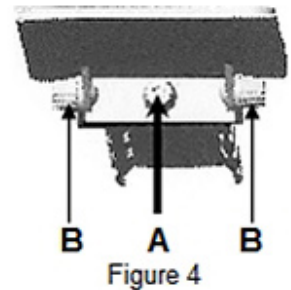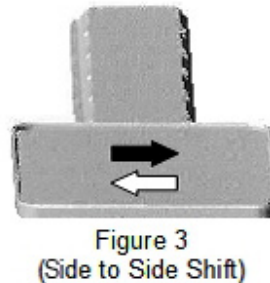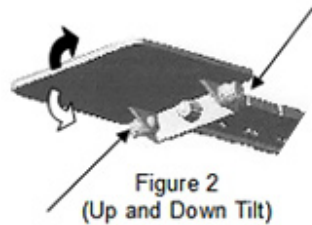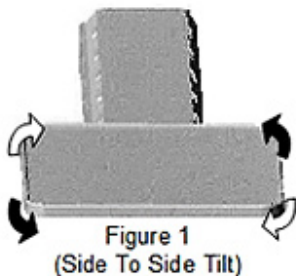

- **Side to side tilt angle shown in figure 1** is accomplished by loosening the knob labeled "A" in figure 4.
- **The tilting shown in figure 2** requires loosening the knobs labeled "B" in figure 4.
- **The adjustment shown in figure 3** requires the removal of knob "A" and reattaching the platform with one of the mounting holes next to knob "A".
- **Knobs must be loosened before any adjustments are made and re-tightened prior to use.**
The ERGO NAV's platform should be tilted slightly downward and away from your seating position for your comfort.

CAUTION: Never force the mouse platform into position.

Loosen, adjust and tighten the adjustment point(s) as needed. Never put unnecessary downward force on the platform.